


# MASERATİ DOLAP KURULUM VE LED BAĞLANTI ŞEMASI

## MASERATİ WARDROBE INSTALLATION AND LED CONNECTION DIAGRAM

Assembly Instruction

Page 1/4

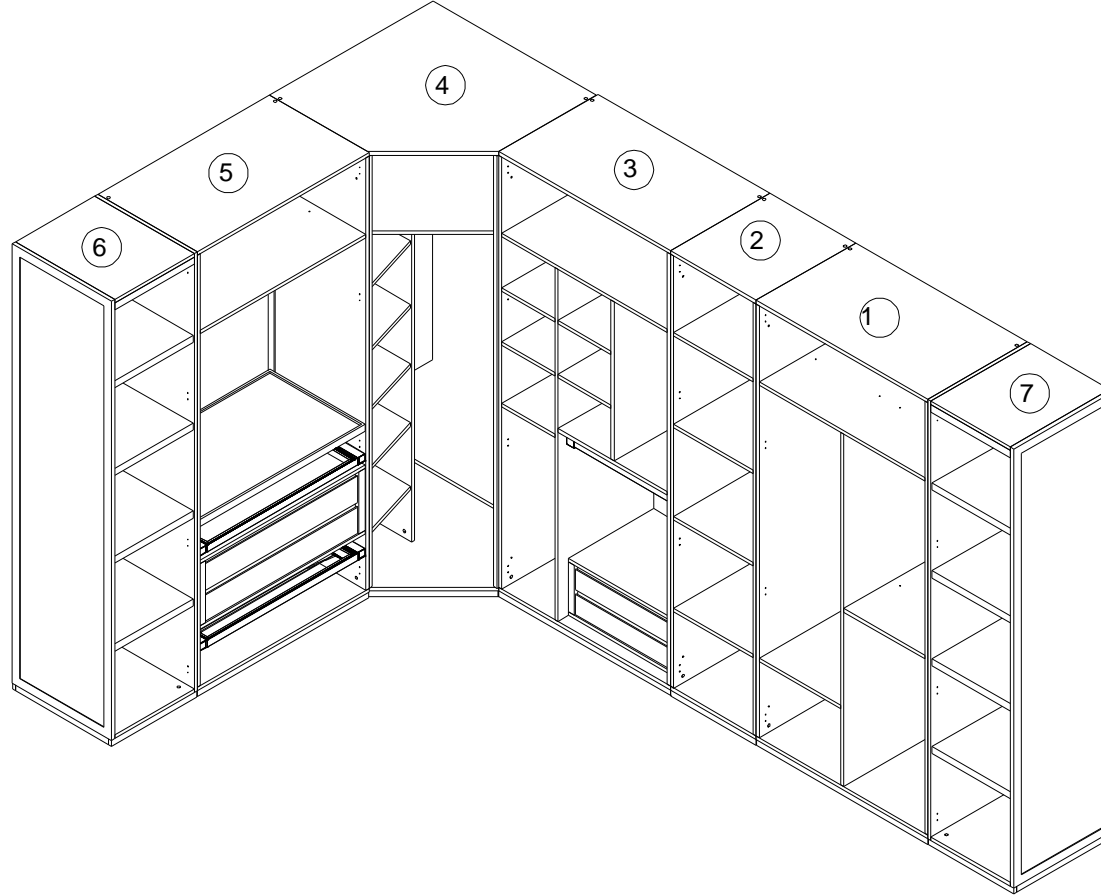

Sayın Müşteri,  
Satın almış olduğunuz bu ürün size ulaşmadan önce tüm test edilmiş, kontrol edilmiş ve paketlenmiştir. Ancak nakliye sırasında bazı parçalar zarar görebilir. Böyle bir durumla karşılaşırsanız ürünün tamamını geri göndermeyin. ve sadece hasarlı parçayı ve malzemeyi isteyin.

Gerekli parça ve malzemelerin kodunu kurulumda bulabilirsiniz. Manuel.  
Montaja başlamadan önce kolilerden çıkan ürünler eksiksizdir. ve zararsız, olduğundan emin olun.  
Birden fazla ürün satın aldıysanız montajı tamamlamadan tek bir ürünü, bitirmeden ikinci ürünü açarak karışıklık yaratmayınız. Kurulumu başlamadan önce her parçayı hafif nemli bir bezle silin ve kurulumu başlatın,  
Başlayabilirsiniz.  
Lütfen mobilyalarınızı amacı dışında kullanmayınız.


Dear Customer,  
Before this product you have purchased reaches you, all of our has been tested and checked and packaged.  
However, some parts may be damaged during transportation. If you encounter such a situation, do not send the entire product back. and simply ask for the damaged part and the material.

You can find the code of the required parts and materials in the installation manual.  
Before starting the assembly, the products coming out of the boxes are complete and harmless make sure it is.  
If you have purchased more than one product, without completing the assembly of a single product,  
Do not cause confusion by opening the second product.  
Before starting the installation, wipe each part with a slightly damp cloth and start the installation.  
You can start.  
Please do not use your furniture for other than its intended purpose.




PARÇA KODU	PARÇA ADI	ADET
1	MONTANA İKİLİ ASKILI DOLAP	1
2	MONTANA TEKLİ DOLAP GÖVDE	1
3	MONTANA PANTALONLUKLU İKİLİ DOLAP	1
4	MONTANA KÖŞE DOLAP GÖVDE	1
5	MONTANA İKİLİ AYAKKABILIKLI DOLAP	1
6	MONTANA CAMLI DOLAP GÖVDE	1
7	MONTANA CAMLI DOLAP GÖVDE	1

In case you need a sparepart, please indicate "Model Code" and "Accessory Code" shown in the assembly instructions.


LET'S PAY ATTENTION TO THE CODE AND LOCATION OF THE MATERIALS WHEN POSITIONING





SIRALI ŞEKİLDE LED SOKETLERİNİ BİRLEŞTİRİNİZ  
COMBINE LED SOCKETS IN SEQUENCE

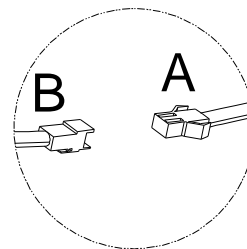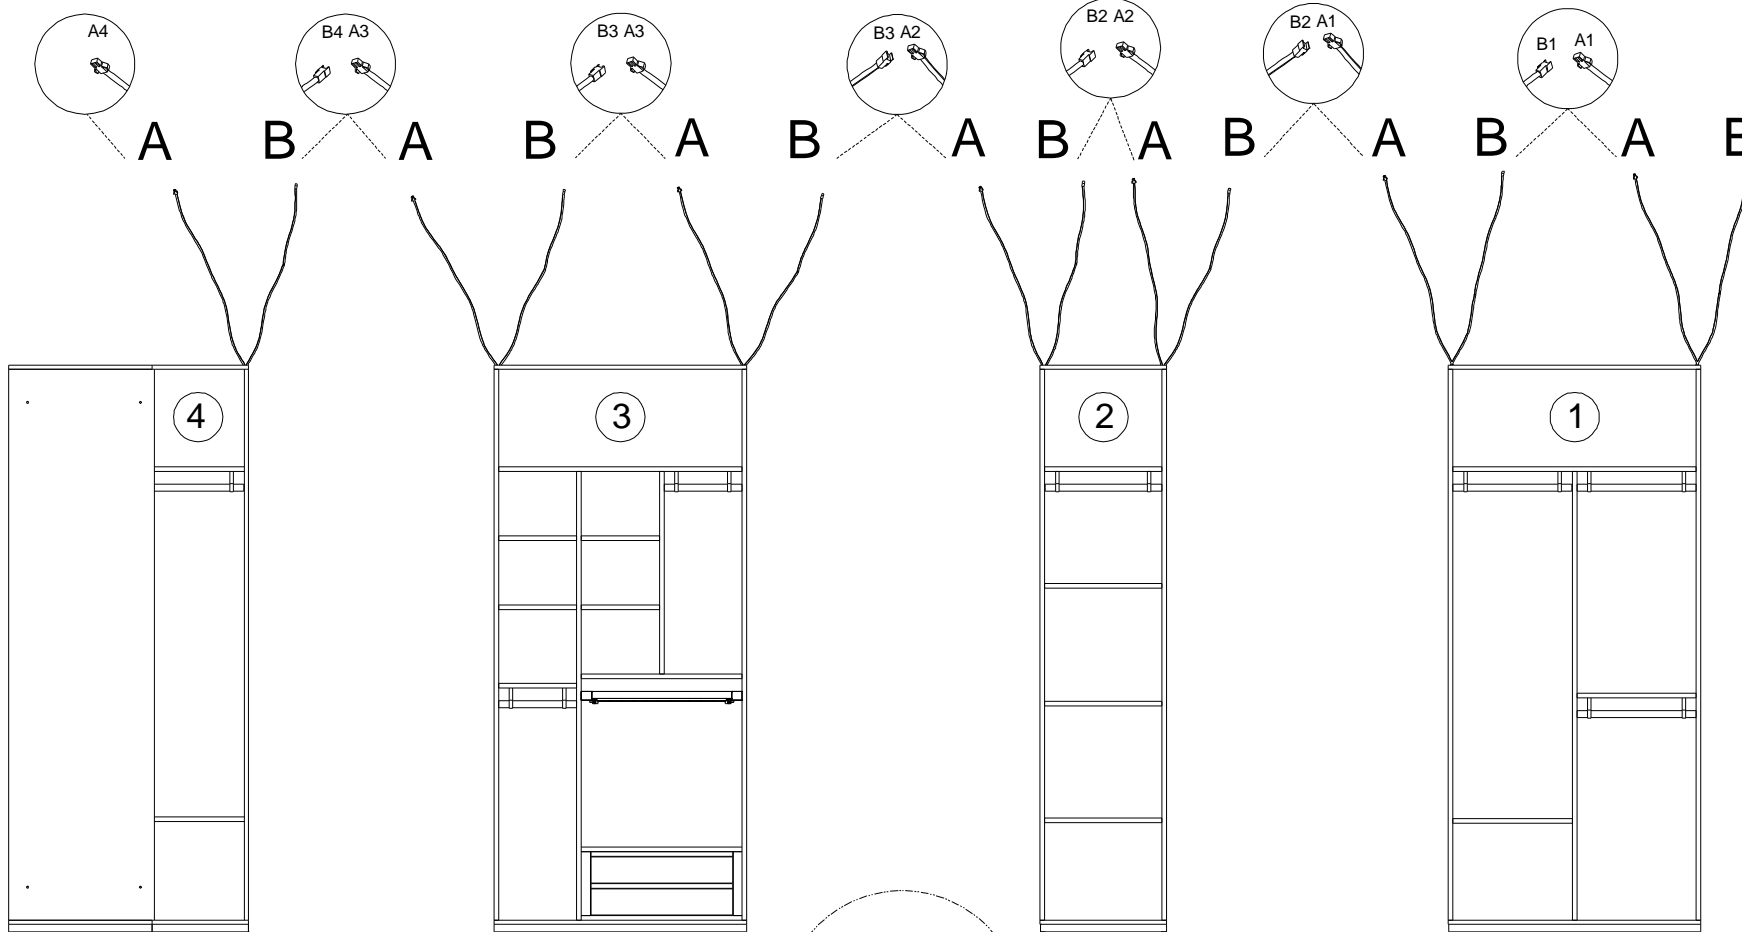

BAĞLANTI METARYALLERİ MONTE EDİNİZ  
INSTALL CONNECTION MATERIALS



SIRALI ŞEKİLDE LED SOKETLERİNİ BİRLEŞTİRİNİZ  
COMBINE LED SOCKETS IN SEQUENCE

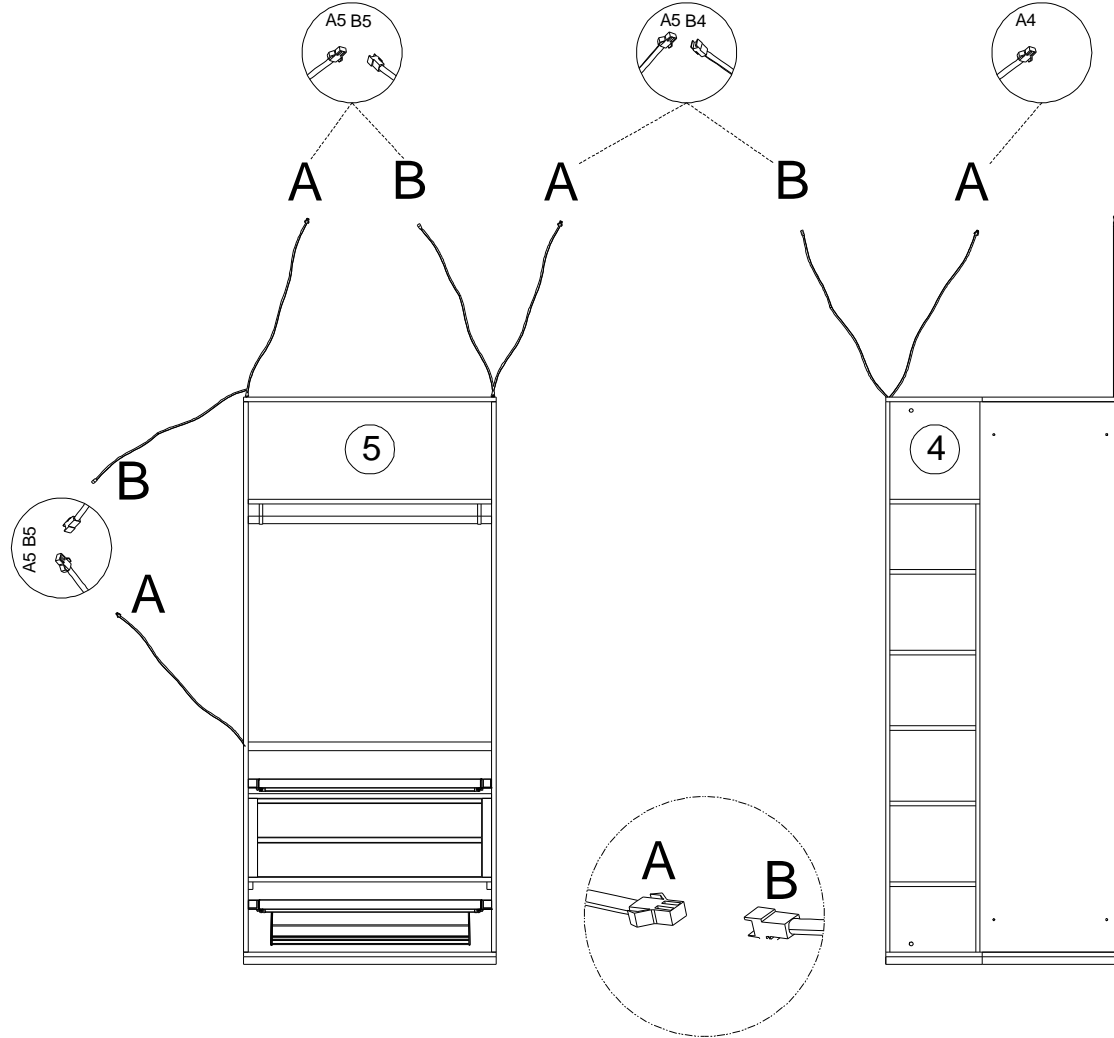

BAĞLANTI METARYALLERİ MONTE EDİNİZ  
INSTALL CONNECTION MATERIALS

